



AY UP LIGHTING SYSTEMS
INSTRUCTIONS FEATURED IN
THIS BROCHURE CAN BE
DOWNLOADED FROM OUR
WEBSITE

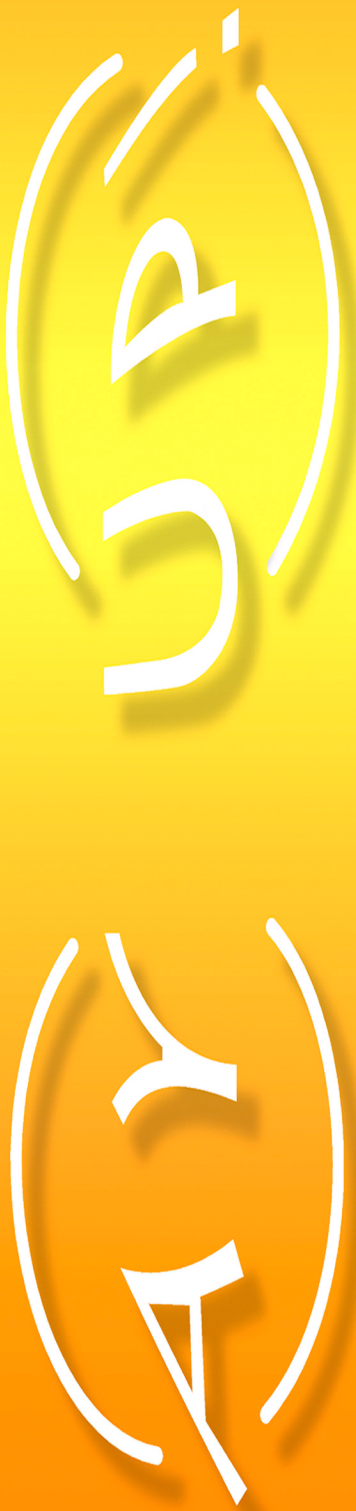

AY UP LIGHTING SYSTEMS

PRODUCT INFORMATION - HANDLEBAR & HELMET SETUP

WWW.AYUP-LIGHTS.COM

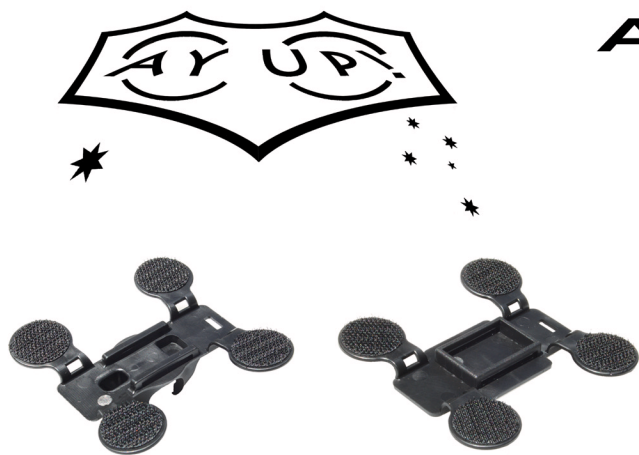

STICK THE HOOK DOTS TO THE UNDER-SIDE OF THE GECKO FEET, PRESS THE DOTS DOWN FIRMLY




STICK THE SMALL HOOK PAD TO THE TOP OF THE BATTERY MOUNT. PASS ONE OF THE VELCRO STRAPS THROUGH THE UNDERSIDE SLOT



STICK ONE OF THE LARGE LOOP PADS TO THE REAR OF THE SMALL BATTERY, FIT TO THE MOUNT AND WRAP THE VELCRO STRAP AROUND THE BATTERY



PEEL OFF THE LOOP DOTS AND PLACE IN THE CENTRE OF THE HOOK DOTS. POSITION THE MOUNT ON YOUR HELMET - SEE A

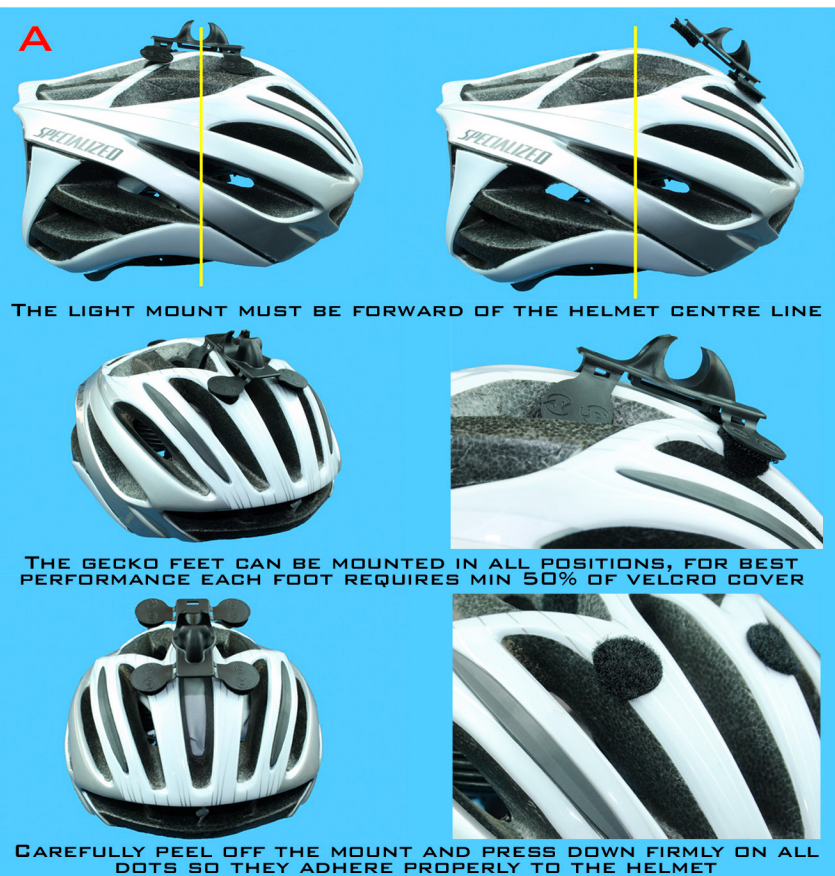

THE LIGHT MOUNT MUST BE FORWARD OF THE HELMET CENTRE LINE

THE GECKO FEET CAN BE MOUNTED IN ALL POSITIONS, FOR BEST PERFORMANCE EACH FOOT REQUIRES MIN 50% OF VELCRO COVER

CAREFULLY PEEL OFF THE MOUNT AND PRESS DOWN FIRMLY ON ALL DOTS SO THEY ADHERE PROPERLY TO THE HELMET



THE SAXONS CAN BE MOUNTED ANYWHERE ON YOUR BIKE BUT WE FIND THE HELMET THE BEST PLACE

SWAP AROUND THE LIGHT AND BATTERY MOUNTS. PUSH THE SAXONS ON AND SWITCH YOUR LIGHTS ON

CLEAN AWAY ALL THE CLUTTER FROM YOUR BARS

POSITION THE RUBBER PACKERS ON THE HANDLEBARS - NOTE, 3MM THICK PACKERS ARE FOR DIA 25MM BARS, 1MM FOR DIA 32MM

OFFER THE HANDLEBAR BRACKET, WITH BAND TO THE REAR

FEED THROUGH THE CABLE TIES WITH THE FLAT SIDE DOWN

WITH BOTH TIES PULLED FIRM, SNIP THE EXCESS OFF

OFFER THE LIGHT TO THE MOUNT, PASS THE CONNECTOR THROUGH THE BAND

CLIP THE BAND ONTO THE PEG. ADJUSTING YOUR LIGHTS ON THE RUN IS EASY THEN SET AND FORGET



POINT THE LIGHT WHERE YOU WANT IT IN A SECOND



FIT THE HANDLEBAR MOUNT AND LIGHT



OFFER THE LARGE VELCRO STRAP UNDER THE STEM



FASTEN THE VELCRO STRAP AROUND THE STEM



WRAP THE STEM STRAP AROUND THE BATTERY



PULL TIGHT AND ATTACH THE VELCRO



PLUG THE LIGHT IN AND SETUP IS COMPLETE

